



**I N S T R U C T I O N S**

**Connect the Shelf**

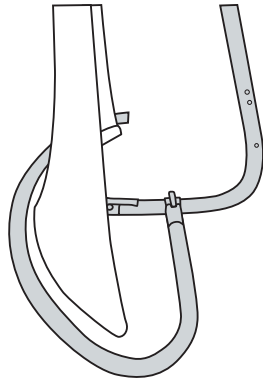

**1**

Attach support base.\* (Tube without hole)  
 \*Left Slope, Right Slope, and Fountain only

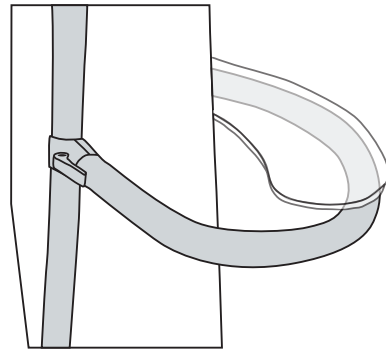

**2**

Attach shelf. (Tube with hole)



- To avoid damaging the acrylic shelf when disassembling the stand, be sure to detach the shelf from the utility bar before removing the utility bar from the stand.
- Guarantee excludes scratching or breaking of acrylic shelf.
- The higher the shelf is positioned, the more likely it is to touch the side of the graphic.
- To improve the strength of the shelf and base tube tighten the connector clamps.

**Shelf Placement\***


- Left Slope 30" h to 46" h
- Right Slope 30" h to 46" h
- Fountain 30" h to 46" h
- Bow 36" h (not adjustable)

\*Shelf and base can connect from either side

**Weight Limit**


- 12 lbs. max per shelf
- 20 lbs. combined total for multiple shelves

**Connect the Stand Off Graphic**

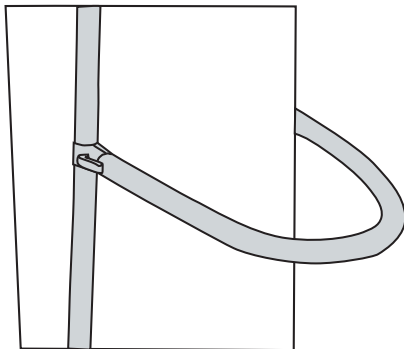

**1**

Attach utility bar to main pole.\*  
 \*Can connect from either side

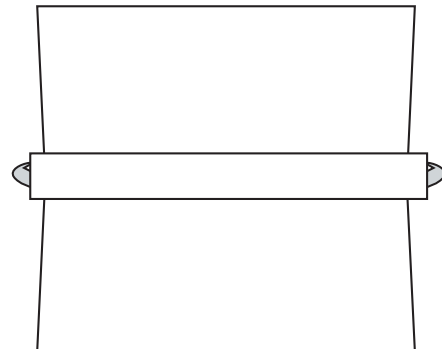

**2**

Attach stand off graphic to utility bar with Velcro strip.



- Utility bar can be placed anywhere between 20" h and 46" h.
- The lower the stand off graphic is positioned, the closer it will be to the main graphic.

